

Dryer Installation (non electrical)

OD 100, B 250-1 R01





⚠ WARNING When using power tools always refer to the instructions and information provided with that piece of equipment and always wear appropriate PPE.

REQUIRED TOOLS AND EQUIPMENT



- Suitable masonry drill with masonry drill bit (8mm)
- Spirit level
- Tape measure (minimum 2m)
- Marker pen
- 7 x wall plugs 8x50mm – supplied
- 7 x stainless steel screws 5 x 60mm – supplied

INSTALLATION PROCESS

1. After selecting a suitable place for installation (see page 6 of the user manual), place the wall bracket against the wall so that the top edge is **900mm from the floor**. Make sure that the bracket is level using the spirit level and mark the 6 holes using a marker pen. Drill the holes and fit the wall plugs. Align the wall bracket with the holes, make sure it is level and fix it securely using the supplied screws. The positioning of the bracket will result in the top edge of the dryer being 1080mm from the floor.

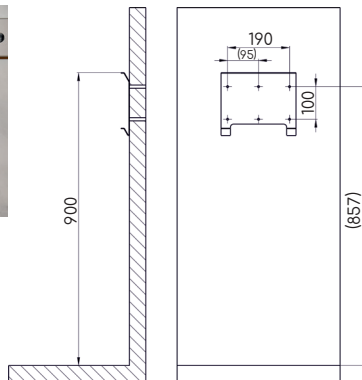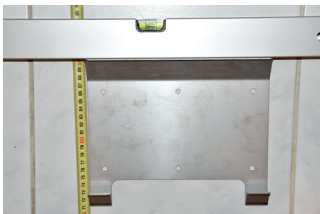

2. **Make sure the transit bar is removed from underneath the product. If not removed, the dryer will not work correctly.**

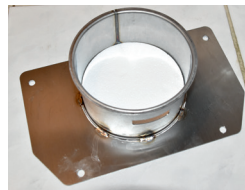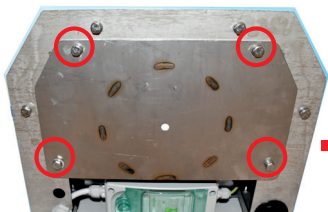


Transit Bar


3. Place the dryer on the wall bracket and push on the top so that the dryer sits securely on the bracket. There should be no gap between the dryer and the wall and the unit should be vertical and level.




4. Unscrew the two screws (identified by the red arrow) at the bottom edges of the dryer and using the same screws, fix the securing bracket (as shown by the green arrow).

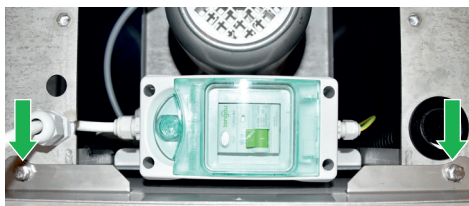

5. Mark a point on the wall through the hole in the securing bracket (red arrow). Remove the dryer from the wall. Drill a hole at the marked point, insert the wall plug, place the dryer back on the wall bracket, push the top so it sits securely on the bracket and fix the securing bracket firmly to the wall using the supplied screw.

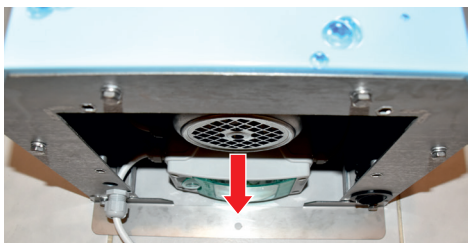

6. Pull the waste hose fully out of the bottom of the dryer (green arrow).

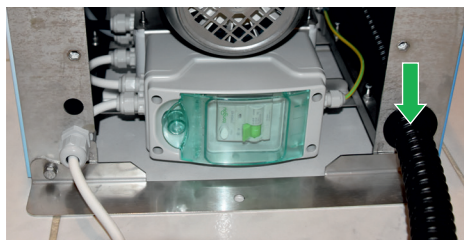

7. Install the operating instruction plaque on the wall, directly above the dryer, so that the top edge of the plaque is 1650mm from the floor.